


# MODEL 850A30 PUSH DISK ALIGNMENT CHART


**Instructions for Removing Push Disks**

1. Lay the airgun on a flat surface with the frame side away from you with handle upwards. If the push disks are completely retracted, push disks need to be brought out 2 to 3 inches. Insert the Push Disk Wrench (larger opening side) between push disk and cartridge stabilizing plate. Push the wrench toward the front plate to create an approximate 2-3" gap between the push disk and cartridge stabilizing plate.
2. Reverse the wrench and place the small opening on hex nut at the end of the push disk. Lean the wrench back toward the air cylinder and the disk will release.

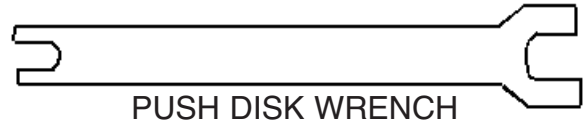

**Instructions for Attaching Push Disks**

1. Slide push disk on the end of the rod. Push until it snaps in.
2. Make sure all arrows are pointing as shown below. May need to wiggle back and forth after snap in.

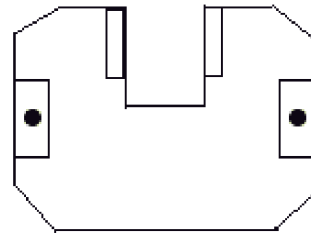

IMPORTANT

Looking from the OUTSIDE of your Model 850A30, the ARROW MARKS on the disks should be aligned as shown.

<p><b>300 ml x 300 ml</b></p>	<p style="text-align: center;">83-5-42</p>	<p style="text-align: center;">83-5-42</p>
<p><b>300 ml x 150 ml</b></p>	<p style="text-align: center;">83-5-42</p>	<p style="text-align: center;">83-5-29</p>
<p><b>300 ml x 75 ml</b></p>	<p style="text-align: center;">83-5-42</p>	<p style="text-align: center;">83-5-19</p>

*Warranty is voided if instructions are not directly followed.*