


Hybrid Tech Instructions

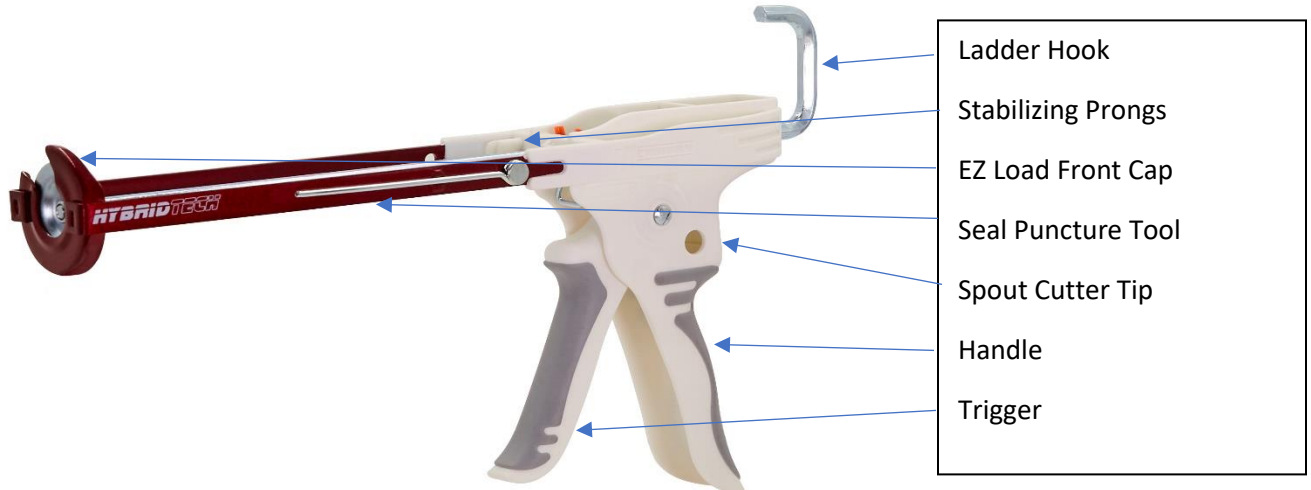

1. Grip the handle, (do not squeeze the trigger as this will grip and lock the rod)
2. Pull back the rod, grabbing at ladder hook, make sure to pull evenly to avoid binding.
3. Place tip of cartridge in spout cutter, cutting at angle, depth of cut determines width of bead.
4. Use Seal Puncture tool insert into nozzle piercing the foil packaging.
5. Place Cartridge into rail, placing bottom of cartridge over the two stabilizing prongs on either side of the rod.
6. Nozzle may meet some resistance going into front cap, gently use thumb to push tube into cradle.
7. Squeeze front trigger to advance the rod.
8. Once released the Drip-Free clip will grip the rod and retract to reduce the drip from nozzle.
9. To remove cartridge, repeat steps 1 & 2, if any resistance is met at the front cap, use thumb as leverage to push against front cap whip using index finger to pull nozzle out of cap opening.